

LN930 M.2 Hardware User Guide

1VV0301078 Rev.10 – 2015-11-11



APPLICABILITY TABLE

PRODUCT
LN930
LN930-AP



SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Notice

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

Copyrights

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

Computer Software Copyrights

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.



3.7	Power Supply Interface.....	42
3.8	Trace & Debug Interface.....	42
3.9	Configuration Pins	43
3.10	Audio Pins (Reserved).....	43
3.11	No Connect Pins.....	45
3.12	Antenna Interface	45
4	Development Tools	47
4.1	Carrier Board.....	47
4.1.1	FlashTool.....	48
4.1.2	PhoneTool	48
4.1.3	System Trace Tool.....	49
4.1.4	RF Calibration	49
4.1.5	Noise Profiling Scan Tool.....	50
5	Windows Software Components	51
5.1	MBIM Toolkit	54
5.1.1	Windows® 7 MBIM driver	54
5.1.2	GNSS UMDF driver for Windows® 7 and Windows® 8	54
5.1.3	M.2 module Firmware Update	54
5.1.4	End User Trace Tool.....	54
6	Linux/Chrome Software Architecture	55
6.1	Overview.....	55
6.2	CMUX Multiplexer	56
6.3	USB 2.0 HS Features.....	57
6.4	USB Configuration	57
6.4.1	Modem Connection	57
6.4.2	Network Connection	57
6.4.3	Default Configuration.....	57
6.5	LPM	58
6.5.1	Suspend/Resume and Remote Wake-up.....	58
6.5.2	Android Software Components.....	58
6.5.3	Chrome Software Components.....	59
	Figure 16 Chrome Software Architecture	60



7	Operating Environment	61
8	Power Delivery Requirements	62
8.1	Electrical Parameters (3.3 V Power Supply).....	62
8.2	Electrical Parameters - Host Interface Signals	63
8.3	Power Consumption.....	64
9	Other Information	66
9.1	EMI/EMC and Platform Noise	66
9.2	Platform Noise Mitigation - Adaptive Clocking	66
9.3	Thermal Monitoring	66
9.4	Seamless Roaming / Wifi Offload	67
9.5	Conducted Transmit Power	67
9.6	Receiver Sensitivity	68
9.7	Antenna Recommendations	71
9.8	GNSS Sensitivity.....	72
10	3GPP Compliance	73
11	WWAN Card Type 3042-S3-B	74
11.1	Mechanical Dimensions	74
11.2	Land Pattern	76
11.3	Antenna Connector Locations	78
12	Safety Recommendations	79
13	Conformity assessment issues	80
13.1	1999/5/EC Directive	80
13.2	CE RF Exposure Compliance	82
13.3	R&TTE Regulation:.....	83
14	FCC/IC Regulatory notices	84
14.1	Modification statement	84
14.2	Manual Information to the End User	84
14.3	Interference statement.....	84



<http://www.telit.com>

To register for product news and announcements or for product questions contact Telit Technical Support Center (TTSC).

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.

1.5 Document Organization

This document contains the following chapters (sample):

[“Chapter 1: “Introduction”](#) provides a scope for this document, target audience, contact and support information, and text conventions.

[“Chapter 2: “Chapter two”](#) gives an overview of the features of the product.

[“Chapter 3: “Chapter three”](#) describes in details the characteristics of the product.

“Chapter 6: “Conformity Assessment Issues” provides some fundamental hints about the conformity assessment that the final application might need.

“Chapter 7: “Safety Recommendation” provides some safety recommendations that must be follow by the customer in the design of the application that makes use of the AA99-XXX.

1.6 Text Conventions



Danger – This information MUST be followed or catastrophic equipment failure or bodily injury may occur.



Caution or Warning – Alerts the user to important points about integrating the module, if these points are not followed, the module and end user equipment may fail or malfunction.



Tip or Information – Provides advice and suggestions that may be useful when integrating the module.

All dates are in ISO 8601 format, i.e. YYYY-MM-DD.

1.7 Related Documents

- TBA



Table 1 M.2 Module - General Feature

Feature	Description	Additional Information	M.2 module			
			HN930	LN930-AP	LN930	
Mechanical	M.2 Card Type 3042 Slot B	30 mm x 42 mm Pin count: 75 (67 usable, 8 slot)	x	x	x	
Operating Voltage	3.3 V +/- 5%	-	x	x	x	
Operating Temperature	-10°C to +55°C – Normal +55°C to +70°C – Extended	Extreme - This is the surrounding air temperature of the module inside the platform when the card is fully operating at worst case condition	x	x	x	
Application Interface (75 pin card)	Interprocessor Communications	USB 2.0 High-speed	x	x	x	
	USIM w/ Card Detect	SIM_CLK, SIM_RESET, SIM_IO, SIM_PWR, SIM_DETECT	x	x	x	
	M.2 Control	Full_Card_Power_On_Off		x	x	x
		Reset#		x	x	x
		W_DISABLE#		x	x	x
		LED #1		x	x	x
		DPR (Body SAR)		x	x	x
		Wake on WWAN		x	x	x
	GNSS Disable		x	x	x	
	Global Positioning (GPS/ GLONASS)	I2C_SCL, I2C_SDA, I2_IRQ, CLKOUT, TX_BLANKING		x	x	x
Antenna Tuning	(4) GPO (RF Transceiver)		-	x	x	
RF Coexistence	(3) GPIO		-	x	x	
RF Antenna	Main & Diversity/ GNSS	Separate coax connectors	x	x	x	
Debug	JTAG	-	x	x	x	
	ETM11	-	-	x	x	
	MIPI PTI	-	-	x	X	



2.2.3 M.2 LN930 Module

The M.2 LTE module is based on Intel’s XMM™7160 modem platform. The M.2 LTE module is a triple-mode (2G, 3G, and 4G) 3GPP release 9 modem providing datacard functionality.

The M.2 LTE module includes support at the 75 pin application interface for M.2 Control, USB 2.0 HS, GNSS, USIM and Antenna Tuning.

A block diagram of the M.2 LTE module is shown in Figure 3.

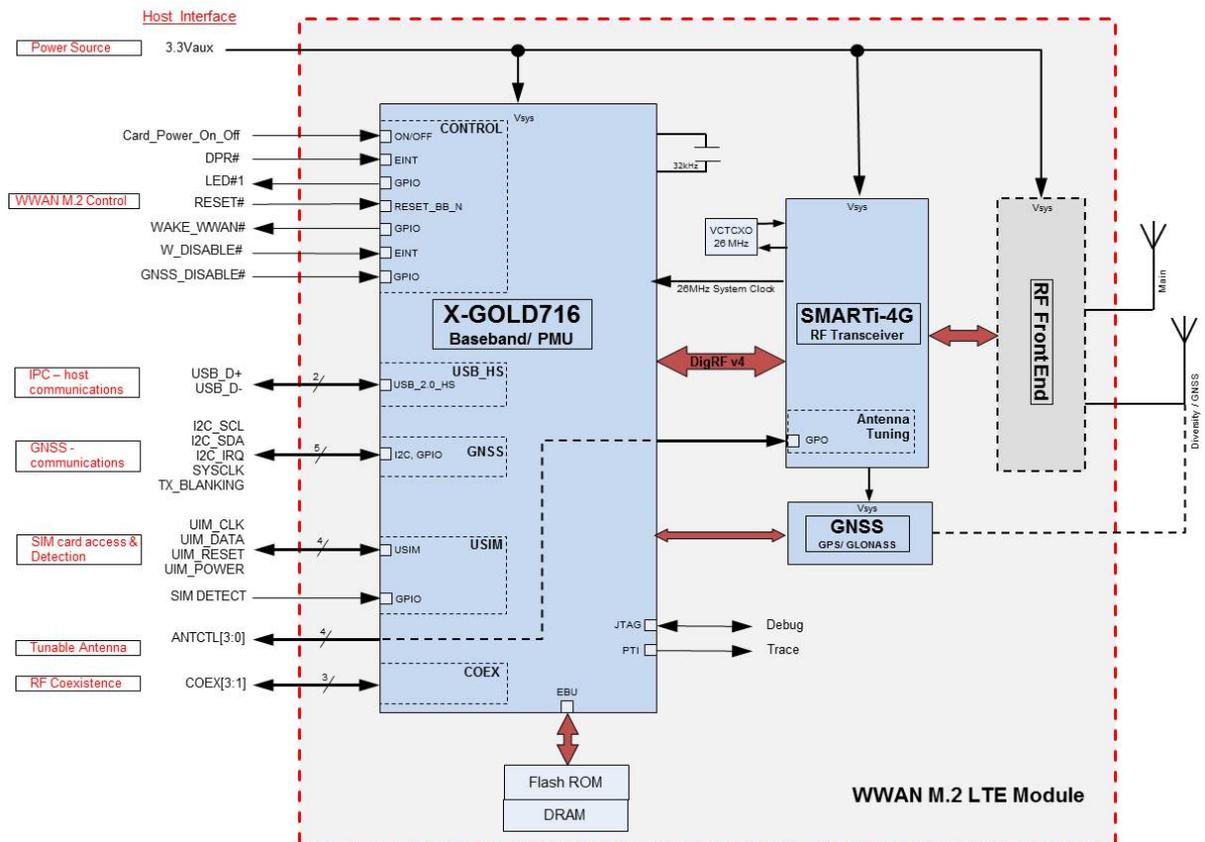


Figure 3 M.2 LTE Module Block Diagram

A more detailed interconnect diagram of the RF Engine utilized on the M.2 LTE Module is shown in Figure 4.



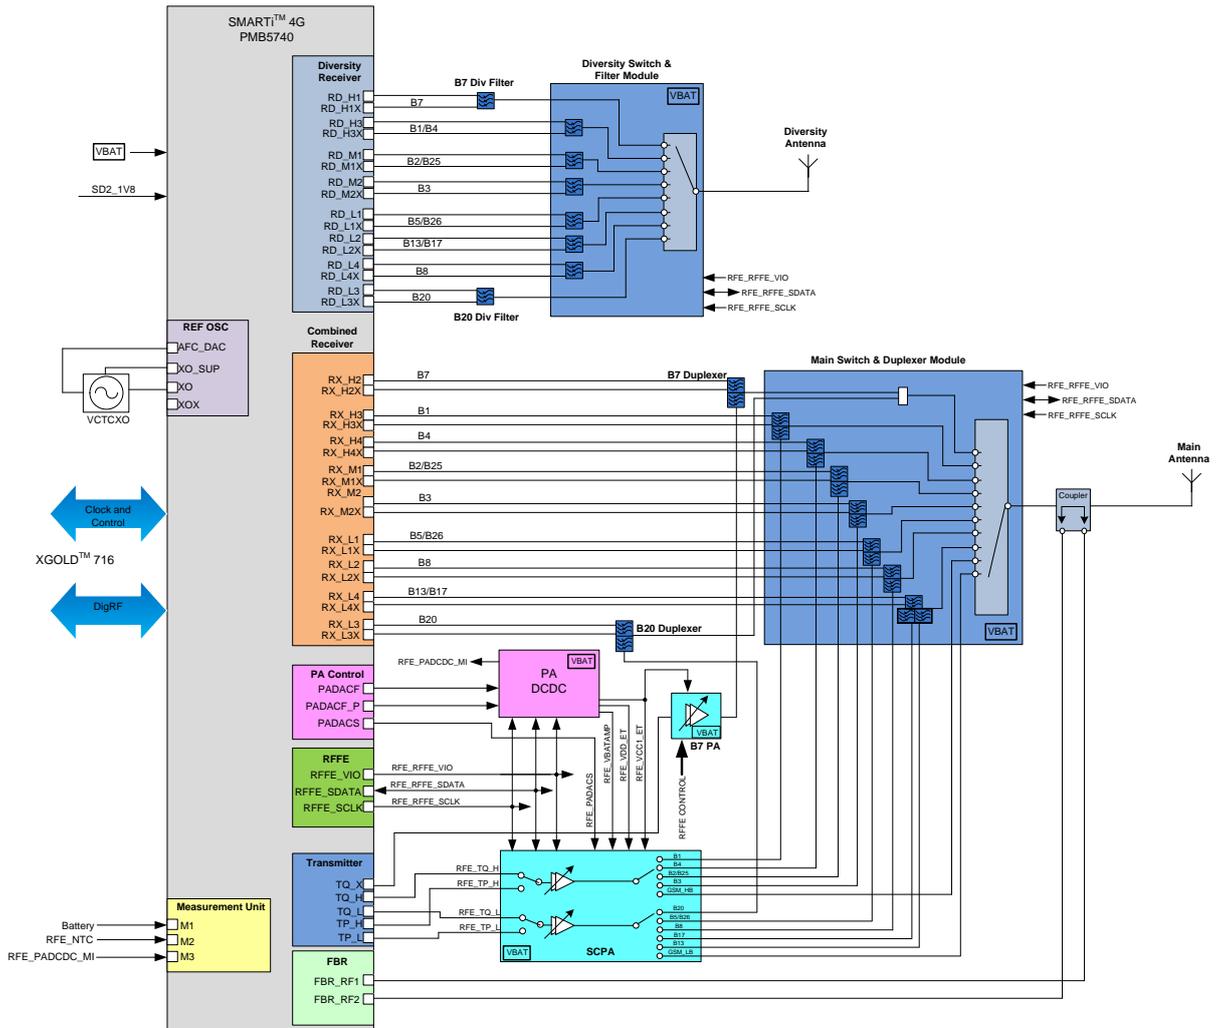


Figure 4 Detailed Interconnection of M.2 LTE Modem RF Engine

2.3 Host Interface Signals

This section describes the signals available to the host processor at the 75 pin application interface. Eight signals are eliminated by the notch on the host connector, leaving 67 usable signals. A diagram of the M.2 module identifying the 75 pin interface is shown in Figure 5.

Note that the M.2 module has all components mounted on the top side. Odd pin numbers are on the top side while even pins on the bottom side.



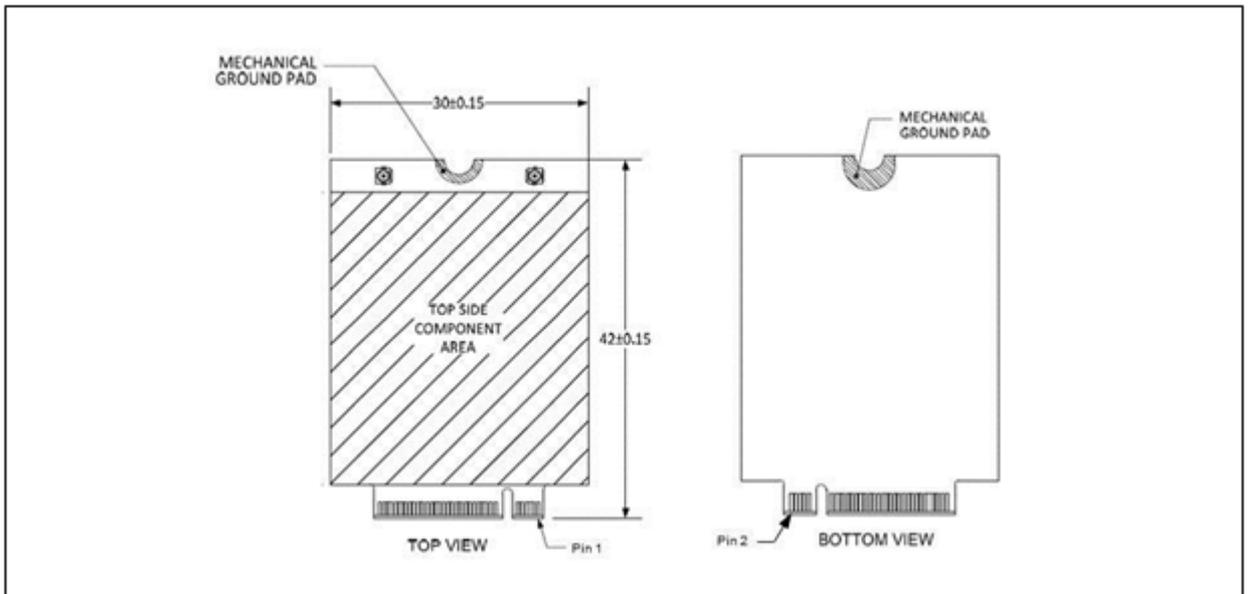


Figure 5 PCI Express M.2 Module Interface

A complete description of all interface signals available at the host interface is listed in Table 4. Some features, such as GNSS and Antenna Tuning, are not available on every M.2 module. On those modules, the signals at the application interface are not connected on the M.2 module.

Table 4 M.2 Host Interface Signals

Pin	Signal Name	I/O	Description	Supply
1	CONFIG_3	O	Presence Indication: WWAN M.2 Connects to GND internally	-
2	3.3V	P	M.2 Supply Pin 3.3 V	3.3 V
3	GND	P	Ground	-
4	3.3V	P	M.2 LTE Supply Pin 3.3 V	3.3 V
5	GND	P	Ground	-
6	FULL_CARD_POWER_OFF#	I	Control signal to power On/Off M.2.	1.8 V
7	USB D+	IO	USB 2.0 HS DPLUS Signal	
8	W_DISABLE#	I	Active low signal to Disable Radio Operation	3.3 V
9	USB D-	IO	USB 2.0 HS DMINUS Signal	



41	N/C	-	Not connected internally on M.2	-
42	I2C_SDA	IO	I2C Data – GNSS Support	1.8 V
43	N/C	-	Not connected internally on M.2	-
44	I2C_IRQ	I	GNSS Interrupt Request – GNSS Support	1.8 V
45	GND	P	Ground	-
46	SYSCLK	O	26 MHz reference Clock output for external GNSS module	1.8 V
47	N/C	-	Not connected internally on M.2	-
48	TX_BLANKING	O	GNSS Blanking Signal used to indicate 2G Tx burst and LTE band 13 Tx burst.	1.8 V
49	N/C	-	Not connected internally on M.2	-
50	N/C	-	Not connected internally on M.2	-
51	GND	P	Ground	-
52	N/C	-	Not connected internally on M.2	-
53	N/C	-	Not connected internally on M.2	-
54	N/C	-	Not connected internally on M.2	-
55	N/C	-	Not connected internally on M.2	-
56	N/C	-	Not connected internally on M.2	-
57	GND	P	Ground	-
58	N/C	-	Not connected internally on M.2	-
59	ANTCTL0	O	RF Antenna Tuning Control Signal 0	1.8 V
60	COEX3	O	Wireless Coexistence between WWAN and WiFi/BT modules. IDC_LteDtxEnv	1.8 V
61	ANTCTL1	O	RF Antenna Tuning Control Signal 1	1.8 V
62	COEX2	I	Wireless Coexistence between WWAN and WiFi/BT modules. IDC_CwsPriority	1.8 V
63	ANTCTL2	O	RF Antenna Tuning Control Signal 2	1.8 V
64	COEX1	O	Wireless Coexistence between WWAN and WiFi/BT modules. IDC_LteFrameSync	1.8 V
65	ANTCTL3	O	RF Antenna Tuning Control Signal 3	1.8 V
66	SIM DETECT	I	SIM Card Detection (I) (low active). • Pull-up resistor on WWAN M.2 module	1.8 V
67	RESET#	I	Single control to reset WWAN	1.8 V
68	N/C	-	Not connected internally on M.2	-



69	CONFIG_1	O	Configuration Status WWAN M.2 Connects to GND internally	-
70	3.3V	P	WWAN Supply Pin 3.3 V	-
71	GND	P	Ground	-
72	3.3V	P	WWAN Supply Pin 3.3 V	-
73	GND	P	Ground	-
74	3.3V	P	WWAN Supply Pin 3.3 V	-
75	CONFIG_2	O	Configuration Status WWAN M.2 Connects to GND internally	-



3 M.2 Module Interface Details

This section provides details on the various interfaces available M.2 modules.

3.1 Interprocessor Interface (IPC)

There are two interfaces on the M.2 host interface that support interprocessor communications (ICP); however, for the WWAN M.2 modules covered by the Product Description only the USB 2.0 High-speed port will be supported.

The other ICP interface, USB Super-speed Inter-Chip (USB_SSIC), is not supported and the signals should not be connected at the host.

The host processor, connected via an ICP interface, has access to the functions of the WWAN card.

3.1.1 USB 2.0 High-Speed – IPC Interface

The USB 2.0 High-speed interface supports the following device classes: CDC-MBIM, CDC-ACM, and CDC-NCM.

The USB Controller is compliant to the USB 2.0 Specification and with the Link Power Management (LPM) Addendum. LPM introduces a new sleep state (L1) which significantly reduces the transitional latencies between the defined power states; hence, improving the responsiveness of the WWAN platform regarding connecting to the internet (Quick Connect).

- USB2.0 LPM L1 Support
- Support for OS assisted fast dormancy
- Selective Suspend support
 - Very low power when in Selective Suspend:
 - <4mw when connected to network (wake)
 - <1 mW no wake

It supports High-speed (HS, 480 MBit/s); Full-speed (FS, 12 MBit/s) transfers. Low-speed mode is **not** supported. Because there is not a separate USB-controlled voltage bus, USB functions implemented on the M.2 module are expected to report as self-powered devices

General Features

- In device mode : High-speed (480 MBit/s) and Full-speed (12 MBit/s)
- In host mode: High-speed (480 MBit/s), Full-speed (12 MBit/s). Low-speed mode (1.5 Mbit/s) is **not** supported.
- Support for 16 bidirectional end points and channels including the end point 0.



Table 5 USB HS Interprocessor Communications Interface

Signal Name	Description	Pin	Direction (WWAN)	Voltage Level
USB_D+	USB Data Plus	7	I, O	Per USB 2.0 specification
USB_D-	USB Data Minus	9	I, O	



3.1.2 USB Super-speed IC (Reserved)

The USB Super-speed IC (USB SSIC) solution is not supported by the WWAN M.2 modules presented in this Product Description. It is set aside for future development. These signals should be left un-connected on the host.

Table 6 USB SSIC – ICP Interface

Signal Name	Description	Pin	Direction (WWAN)	Operating Voltage Range
SSIC_RXN	USB SSIC Receiver Signal N	29	O	Per SSIC specification
SSIC_RXP	USB SSIC Receiver Signal P	31	O	
SSIC_TXN	USB SSIC Transmitter Signal N	35	I	
SSIC_TXP	USB SSIC Transmitter Signal P	37	I	



- The pull-up current cannot be increased to speed up rise time, because the pull-up current must not exceed 1 mA including any crosstalk.
 - Pull-up current is defined by the 4.7 kΩ pull-up resistor (to USIM_PWR) on the WWAN M.2 module, plus 200 μA from the baseband chip is approximately 0.8 mA.
- Place a decoupling capacitor close to the SIM card socket.

3.3 GNSS Interface

Some M.2 modules incorporate GPS and GLONASS receivers with aGPS to support Global Positioning.

For M.2 modules that feature GNSS support, see Table 1, the M.2 module incorporates the CG1960 Single-Chip GNSS Device, which is a complete receiver for simultaneous reception and processing of both GPS and GLONASS signals. It includes LNA, mixer, bandpass filter, VCO, ALC, fractional-N frequency synthesizer, digital tunable filters, PGA stage, and multi-bit ADCs. A UART interface is used by the X-GOLD™ Communications Processor on the M.2 module to control the GNSS device. The solution offers best-in-class acquisition and tracking sensitivity, TFF and accuracy.

The GNSS device supports several different power management modes which gives the lowest possible energy usage per fix. The pre-calculated location data will be sent over the USB host interface. In addition, the M.2 will produce GPS data when the system is in sleep mode via an I2C interface to allow for applications to be available in low power modes.

GNSS General Features

- Autonomous GPS / GLONASS
- Assisted GPS Using SUPL 1.0/2.0
 - MS Assisted positioning (SET / NET Initiated)
 - MS Based positioning (SET / NET Initiated)
- SUPL 2.0 Feature Sets
 - Version Negotiation
 - Periodic Triggers
 - Emergency Positioning
 - Area Event Triggers (SET Init & NET Init)
 - Application ID
 - Enhanced Cell Id
 - Multiple Location IDs
 - Session Info Query
 - Location Transfer to 3rd Party
 - Notification Verification Based on Current Location
 - Location Request to another SET

A diagram of the GNSS connections on the M.2 module is shown in Figure 6. This diagram identifies the signals between the X-GOLD™ baseband and GNSS devices along with the USB and GNSS signals available to the host at the card interface.



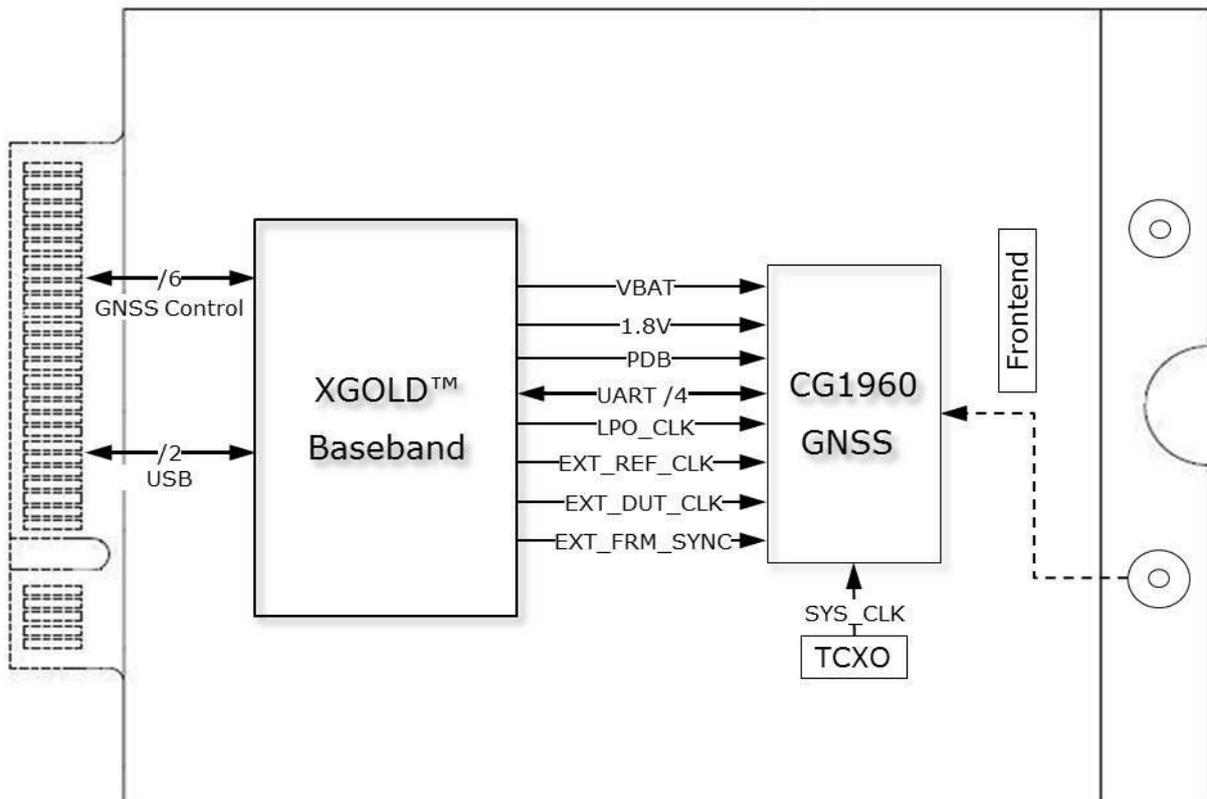


Figure 6 GNSS Connections and Interface

A description of the signals between the X-GOLD™ baseband and the CG1960 interface are defined in Table 8.



Signal W_DISABLE# is provided to allow users to disable, via a system-provided switch, the add-in card's radio operation in order to meet public safety regulations or when otherwise desired. Implementation of this signal is required for systems and all add-in cards that implement radio frequency capabilities.

The W_DISABLE# signal is an active low signal that when driven low by the system shall disable radio operation. The assertion and de-assertion of the W_DISABLE# signal is asynchronous to any system clock. All transients resulting from mechanical switches need to be de-bounced by the host system and no further signal conditioning will be required. When the W_DISABLE# signal is asserted, all radios attached to the add-in card shall be disabled. When the W_DISABLE# is not asserted or in a high impedance state, the radio may transmit if not disabled by other means such as software.

The operation of the W_DISABLE# Signal is:

Enable, ON (3.3V): The radio transmitter is to be made capable of transmitting.

Disable, OFF (low): The radio transmitter(s) is to be made incapable of transmitting.

Standard TTL signaling levels shall be used making it compatible with 1.8 V and 3.3 V signaling.

W_DISABLE# pin has a pull-up resistor on the M.2 module.

Table 11 Radio Disable Signal

Signal Name	Detailed Description	Pin	Direction (WWAN)	Voltage Level
W_DISABLE#	<p>Disable Radio. This active low signal allows the host to disable the M.2 radio operation in order to meet public safety regulations or when otherwise desired.</p> <ul style="list-style-type: none"> • Logic Low: M.2 Off • Logic High: function is determined by Software (AT Command). <p>If this pin is left un-connected, functionality is controlled by software. Care should be taken not to activate this pin unless there is a critical failure and all other methods of regaining control and/or communication with the M.2 module have failed.</p>	8	I	Compatible with 1.8 V/3.3 V

Standard TTL signaling levels shall be used.



Table 13 LED#1 Signal

Signal Name	Detailed Description	Pin	Direction (WWAN)	Voltage Level
LED#1	LED Status Indicator	10	O (OD)	3.3 V

Figure 7 is an example of how an LED indicator is typically connected in a platform/system using 3.3 V. The series resistor can be adjusted to obtain the desired brightness.

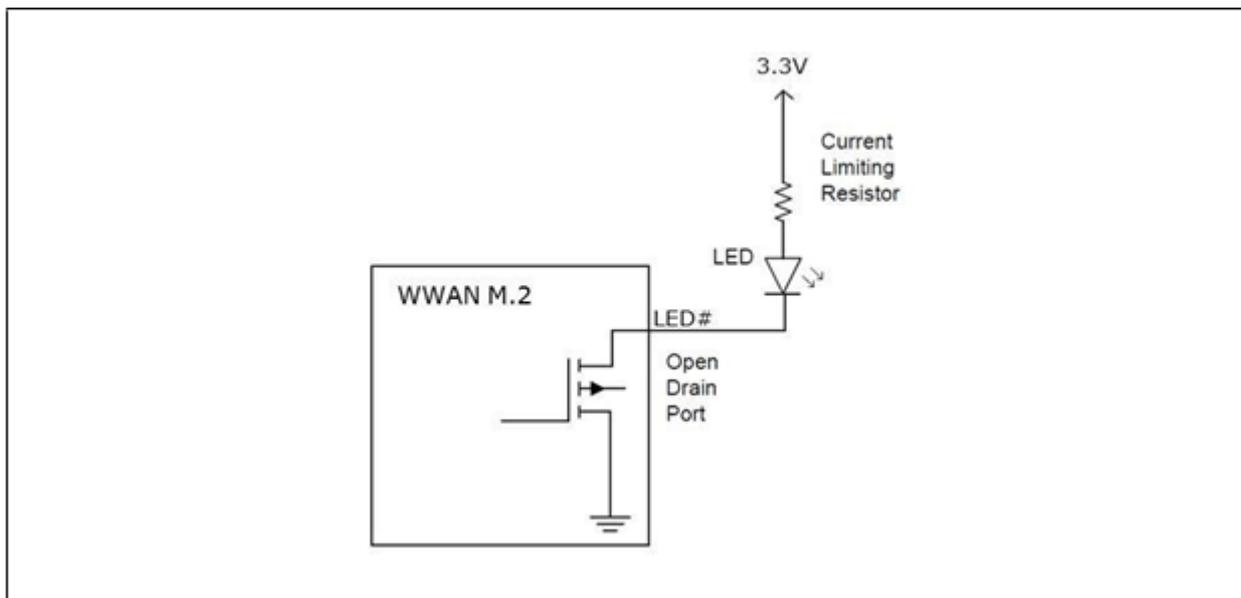


Figure 7 Typical LED Connection

The indication protocol for the LED is shown in Table 14.

Table 14 LED State Indicator

State	Definition	Characteristics	WWAN
OFF	The LED is emitting no	-	Not
ON	The LED is emitting light in a stable non-flashing state	-	Powered registered but not transmitting or receiving

3.4.4 Wake on WWAN Signal

An output signal is available to wake the host system, WAKE_WWAN#. This is an active low, open-drain output.

This output requires a pull-up resistor on the host system.



Table 16 DPR# / SAR Support Signal

Signal Name	Detailed Description	Pin	Direction (WWAN)	Voltage Level
DPR#	Dynamic Power reduction.	25	I	1.8 V



3.5 Tunable Antenna Control Interface

In notebook platforms, since the WWAN antennas are usually located on the top of the lid, there is a long RF mini-coax cable that can be up to 60 cm long between the antenna and WWAN module, it is preferred to use switches/tunable components directly on the antenna for antenna band switching/tuning to improve efficiency. On select WWAN M.2 modules, four (4) GPOs are available on the host interface that can be connected to an external antenna switch, to load the antenna with different impedances, configuring the different frequency responses for the main antenna. A sample block diagram depicting the antenna control signal connections to the antenna switch is shown in Figure 8.

Intel’s current antenna control solution offers an open loop control solution. The WWAN M.2 modem expects the AP to provide the antenna profile detection and through a pre-defined API, notify the WWAN M.2 modem with the correct antenna profile. The WWAN M.2 modem then applies the proper antenna profile data accordingly.

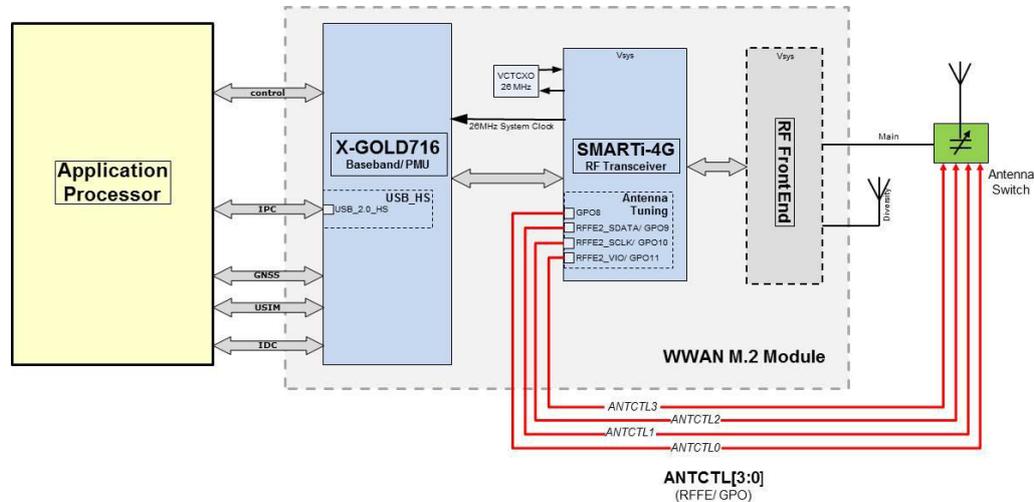


Figure 8 Antenna Control – Connections Detail

The electrical specification for the antenna control GPIOs are shown in Table 17.

Table 17 Tunable Antenna Control Signals

Signal Name	Description	Smarti™ 4G Signal	Pin	Direction (WWAN)	Voltage Level
ANTCTL0	Antenna Control 0	GPO8	59	O	1.8V
ANTCTL1	Antenna Control 1	RFFE2_SDATA/ GPO9	61	O	1.8V
ANTCTL2	Antenna Control 2	RFFE2_SCLK/ GPO10	63	O	1.8V
ANTCTL3	Antenna Control 3	RFFE2_VIO/ GPO11	65	O	1.8V



3.6 In-Device Coexistence Interface

As more and more radios are added to PC Ultrabook™ and tablet platforms, the sources RF interference increases significantly as multiple radios will have overlapping transmissions and receptions. This problem will increase further as overlapping bands continue to be rolled out; WIFI, BT, WWAN will all use overlapping band from 2300 MHz to 2600 MHz.

In-Device Coexistence is a feature which improves the user experience and maximizes throughput and Quality of Service of connectivity systems (WLAN, BT and GNSS) when these radios are simultaneously running with the WWAN M.2 LTE modem.

A diagram of the In-Device Coexistence architecture is shown in Figure 6.

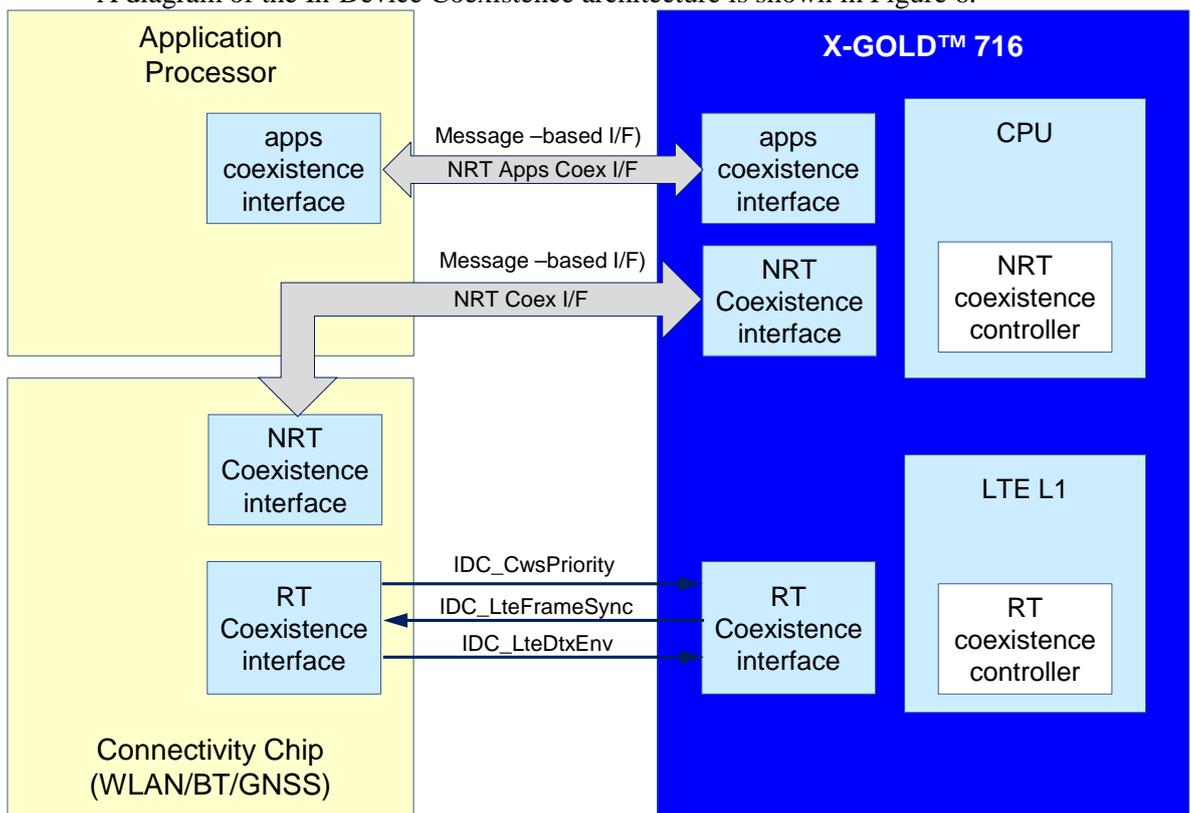


Figure 9 In-Device Coexistence Architecture

Seamless Co-running

In-Device-Coexistence primarily aims at avoiding interference between radio systems to allow seamless co-running where LTE and WLAN/BT/GNSS ensuring their maximum throughput and performance. To do so, a Non Real Time (NRT) coexistence controller is implemented on the ARM™ CPU. The NRT coexistence controller centralizes LTE, WLAN, BT and GNSS information and performs interference avoidance mechanisms, selecting interference-safe frequency configurations whenever possible. The NRT coexistence controller is also in charge of enabling some Real Time (RT) coexistence mechanisms when



3.9 Configuration Pins

There are 4 configuration pins on the M.2 module to assist the host identifying the presence of an Add-In card in the socket.

On the M.2 module, pins CONFIG_0..3 are configured as shown in Table 20.

All configuration pins can be read and decoded by the host platform to recognize the indicated module configuration and host interface supported. On the host side, each of the CONFIG_0..3 signals needs to be fitted with a pull-up resistor.

Table 20 M.2 Configuration Pins

Signal Name	Description	Pin	Direction (WWAN)	Voltage Level
CONFIG_0	This signal is not connected to the WWAN M.2 module.	21	O	-
CONFIG_1	Tied to Ground internally on the WWAN M.2 module.	69	O	0 V
CONFIG_2	Tied to Ground internally on the WWAN M.2 module.	75	O	0 V
CONFIG_3	Tied to Ground internally on the WWAN M.2 module.	1	O	0 V

3.10 Audio Pins (Reserved)

There are 4 signals on the host interface that are reserved to support a digital audio interface. This is for future development, all existing WWAN M.2 modules do not support audio; **therefore, these signals should be left unconnected at the host to avoid any contention.**

Table 21 Audio Signals (Future development)

Signal Name	Description	Pin	Direction (WWAN)	Voltage Level
AUDIO0	PCM Clock (I2S_CLK)	20	IO	1.8 V
AUDIO1	PCM In (I2S_RX)	22	I	1.8 V



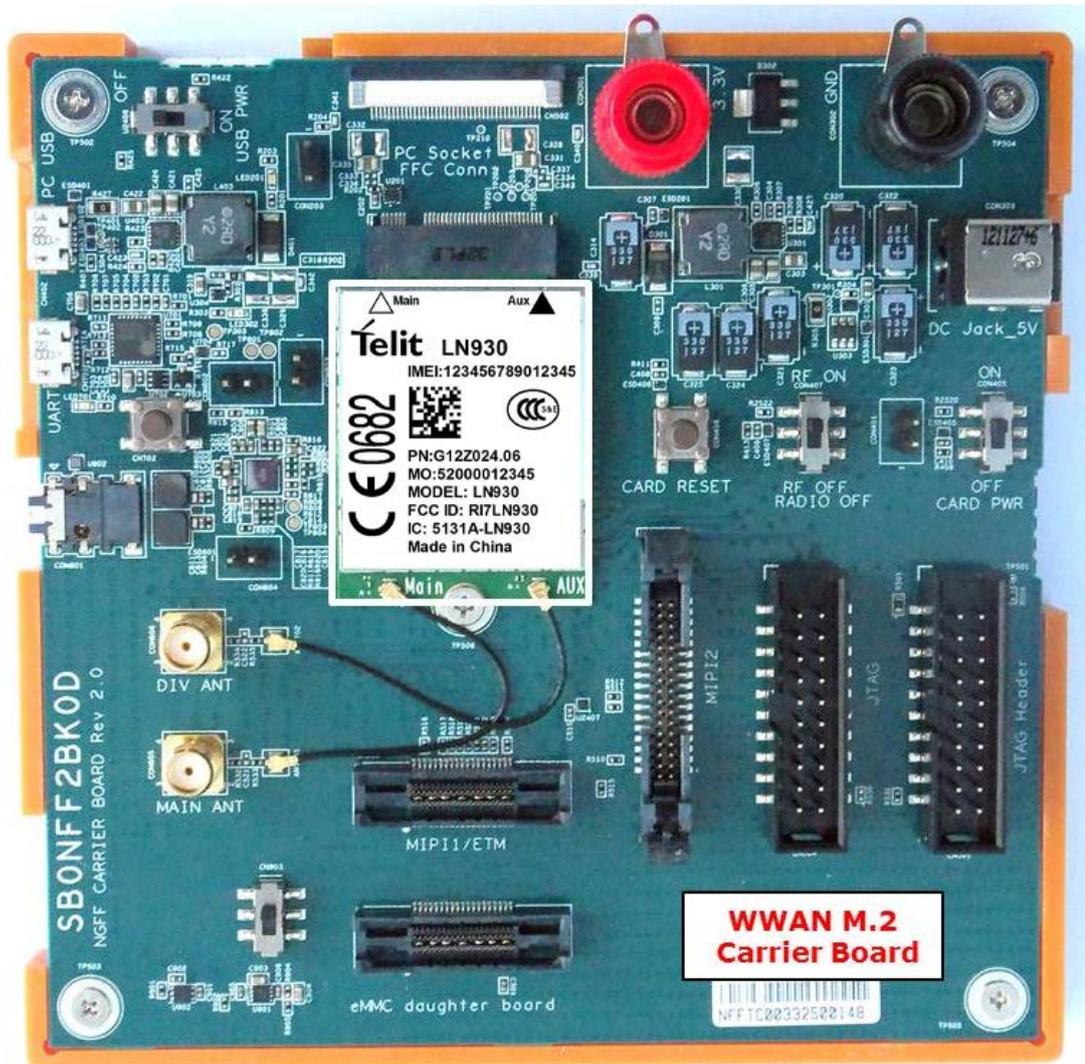


Figure 11 M.2 Carrier Board

4.1.1 FlashTool

Intel Mobile Communications provides a utility program called FlashTool for downloading a binary image into the Flash memory of the M.2 module. The USB-HS port or USIF on the platform is used for connection to a PC via a USB cable for flashing.

FlashTool is a Win32/64 application built on top of the dynamic link library, Download.DLL.

4.1.2 PhoneTool



- Proven Single-Ended BER for faster BER
- < 4 sec/per channel for 3G fast verification (BER, RSSI, TX, ILPC)

Tester supported: R&S CMU200, CMW500, and Agilent 8960

4.1.5 Noise Profiling Scan Tool

M.2 modules are marketed for use on Tablet, Ultrabook, and Laptop devices. OEM vendors routinely offer multiple hardware configurations for the same base model, with different processor speed, drive type, or display type, etc. Each configuration has a different Radio Frequency emission profile with the possibility of introducing new interference sources to a modem module.

The Noise Profiling Tool will measure, record down & plot graph of the RF noise level present on each RX channel. This SW tool will switch on receiver port and sweep all applicable RX channels on each band and each technology (WiFi, Bluetooth, GPS, and GLONASS). This will allow OEM vendors to quickly know the noise jamming profile to the modem module plugged in their devices.



5 Windows Software Components

The following section describes the system architecture of Inter-Processor Communication on a WWAN M.2 module when connected to a Microsoft Windows® based Host OS Windows® 7, Windows® 8.x.

The software components of a WWAN M.2 module running Windows® 7 and Windows® 8 are depicted in Figure 12 and Figure 13 respectively.

In the Windows® 7 architecture:

- The Windows® 7 driver interfaces with the WWAN M.2 modem using a virtual terminal connection over CDC-ECM.
- A Third party connection manager utilized
- Independent Hardware Vendor (IHV) provided MBIM driver

In the Windows® 8 architecture:

- Microsoft requirements:
 - MBIM interfaces
 - User Mode Driver Framework (UMDF) driver for GNSS, and Firmware Update, Carrier Switching application.
 - RTD3 support

For all Windows platforms:

- The WWAN M.2 module is exposed as a composite device
- GNSS will be supported through a serial interface
- When mobile broadband is disabled, GNSS will still be available.
- The mobile network adapter driver will interface to the modem software through the MBIM interface.
- All Intel specific features will be supported through MBIM.
- The connection manager provided with Win 8 OS and above will be used. For Win 7, the IHV provided connection manager is used.
- There will be an application layer to hide the differences in the mobile broadband API between Win 7 and Win 8.



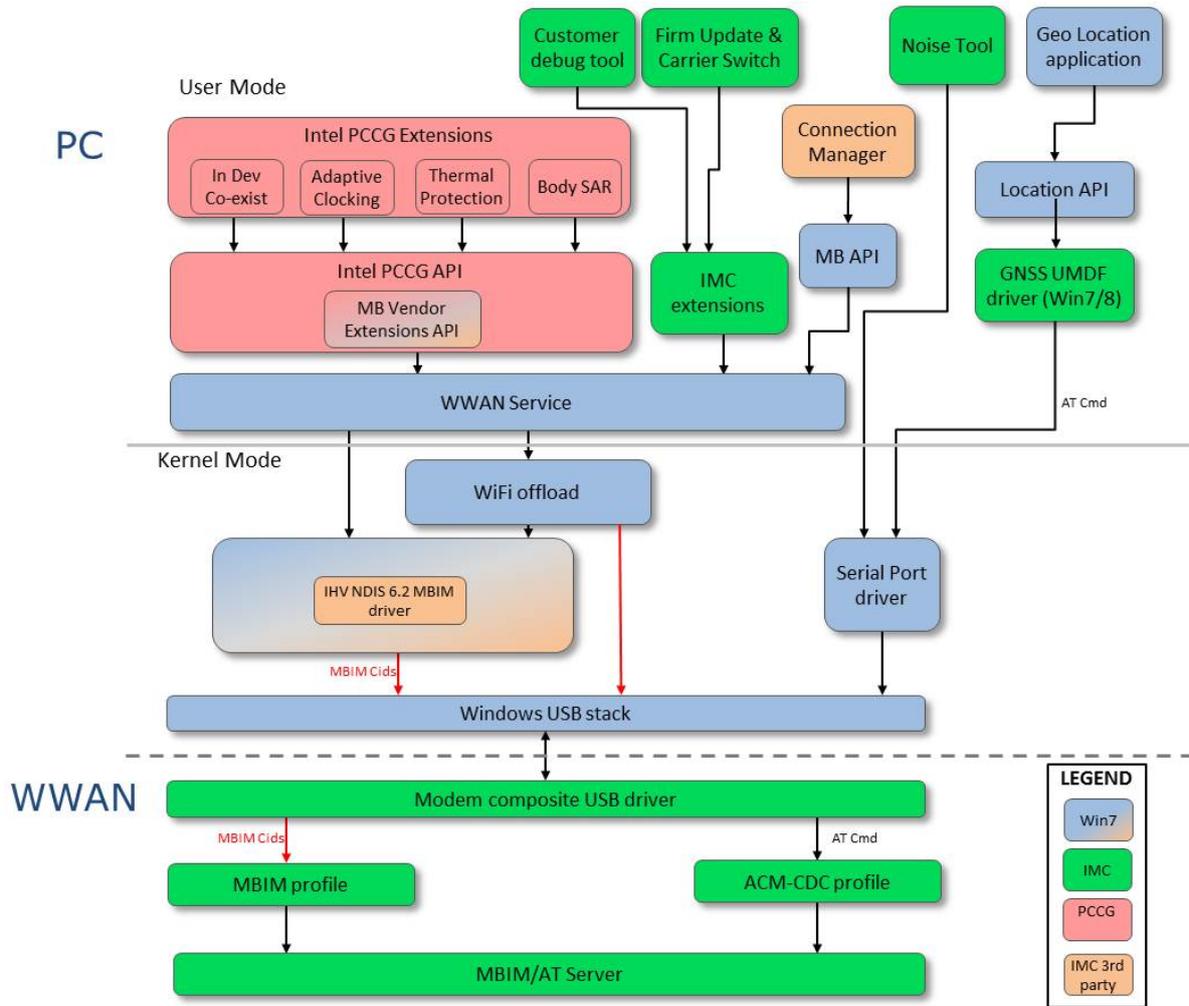


Figure 12 Windows 7 Software Architecture



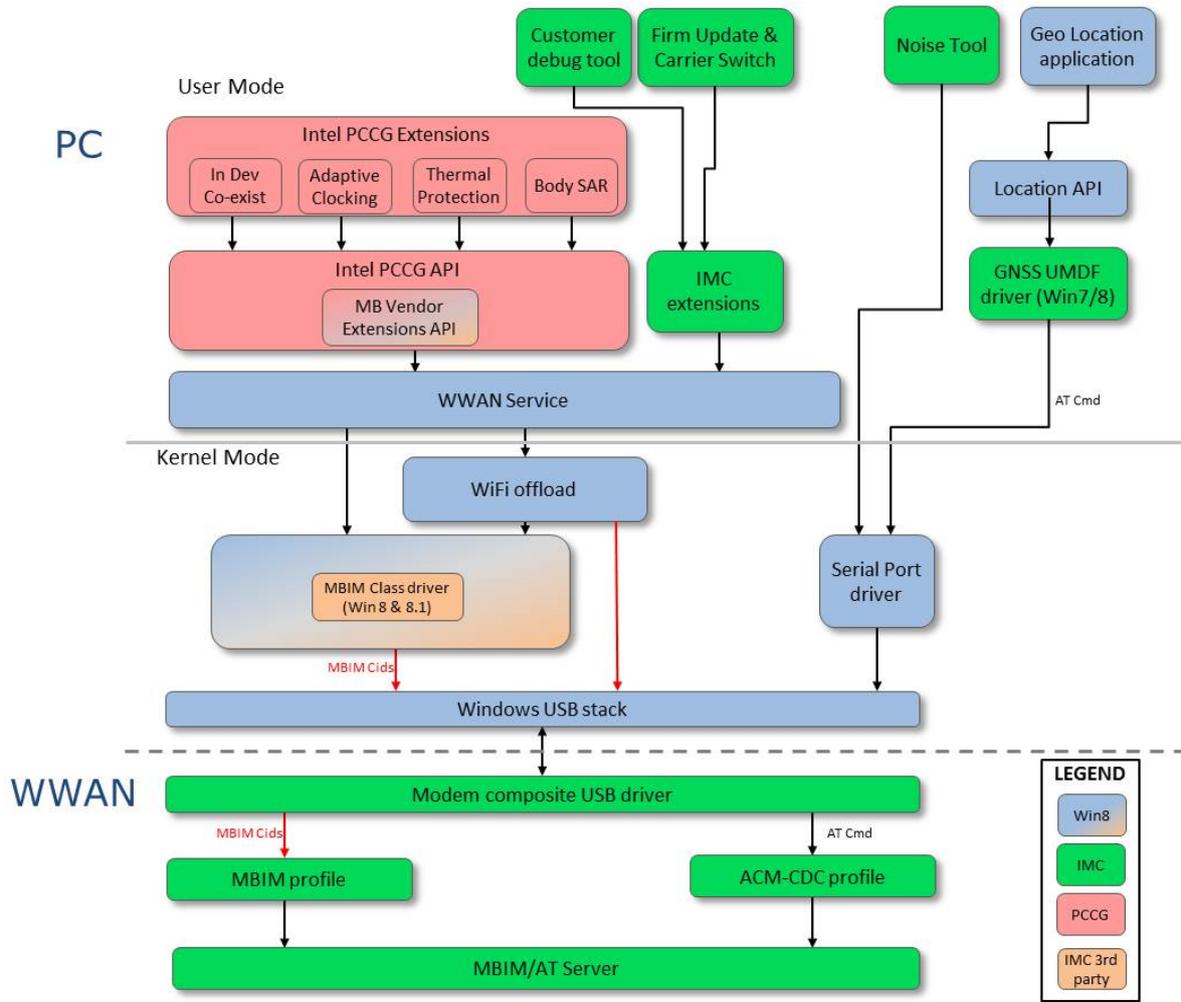


Figure 13 Windows 8 Software Architecture



6 Linux/Chrome Software Architecture

The following section describes the system architecture of Inter-Processor Communication on a M.2 module when connected to a Linux based Host OS (Android, Chrome, and Ubuntu). The description is only concerned with the HS-USB port which is the only available functional interprocessor communications (IPC) interface at run-time and takes into account only the AT control plane and IP packets data connection. Audio packet exchange is outside the scope of the current version of M.2.

6.1 Overview

Figure 14 illustrates the architecture of the IPC and its components.

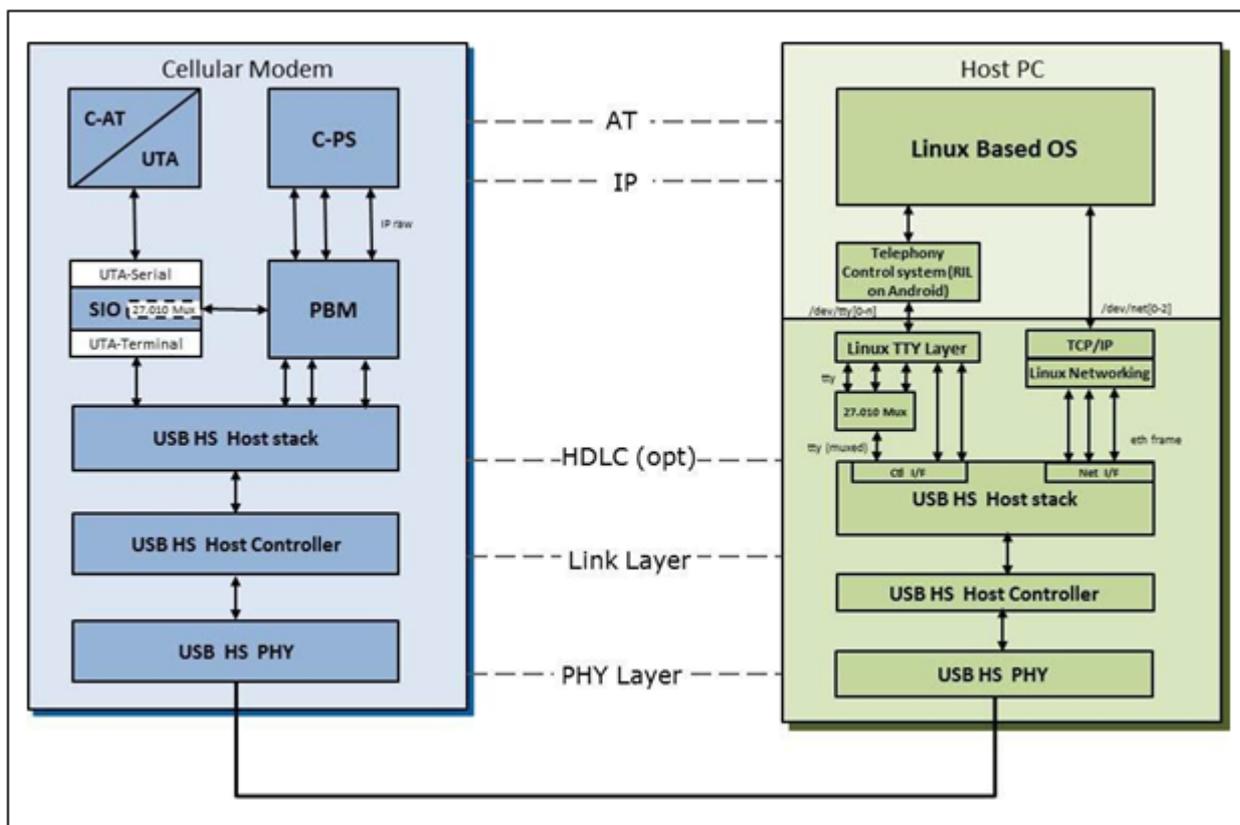


Figure 14 Linux Software Architecture

The user data is transferred from/to the cellular protocol stack (C-PS) to the IPC via a centralized memory manager. The centralized memory manager is called packet buffer manager (PBM). The user data is routed along the data plane as IP packets using several



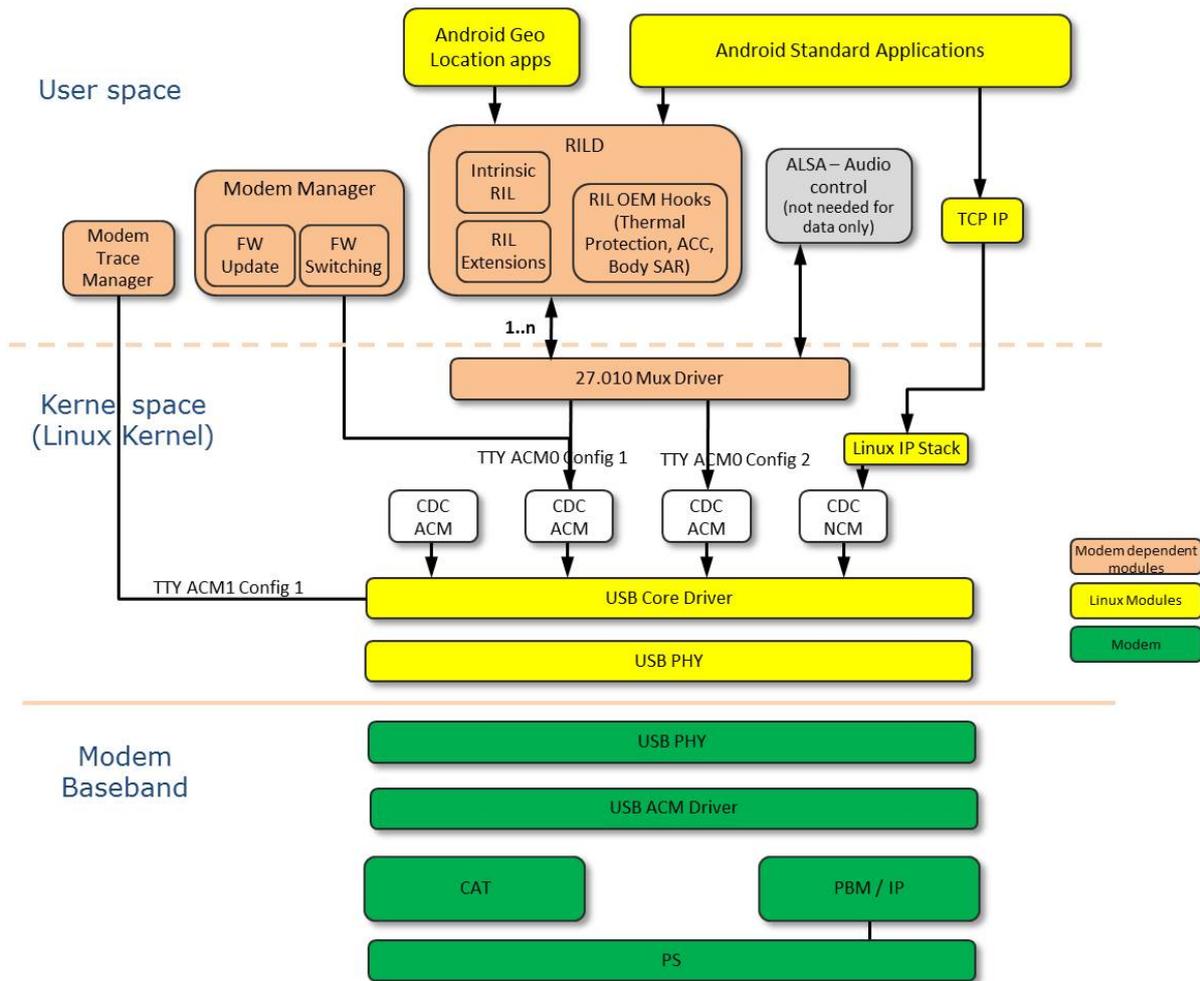


Figure 15 Android Software Architecture

6.5.3 Chrome Software Components

A preliminary view of the software components of a WWAN M.2 module running the Chrome operating system is shown in Figure 16. The architecture is still in development; however, it is expected that:

- Intel Intrinsic Radio Interface Layer (RIL) will be used and supported via a USB CDC-MBIM driver.
- All Intel features will be supported via MBIM commands.
- Advanced Linux Sound Architecture (ALSA) will not be supported on data only WWAN M.2 modules.



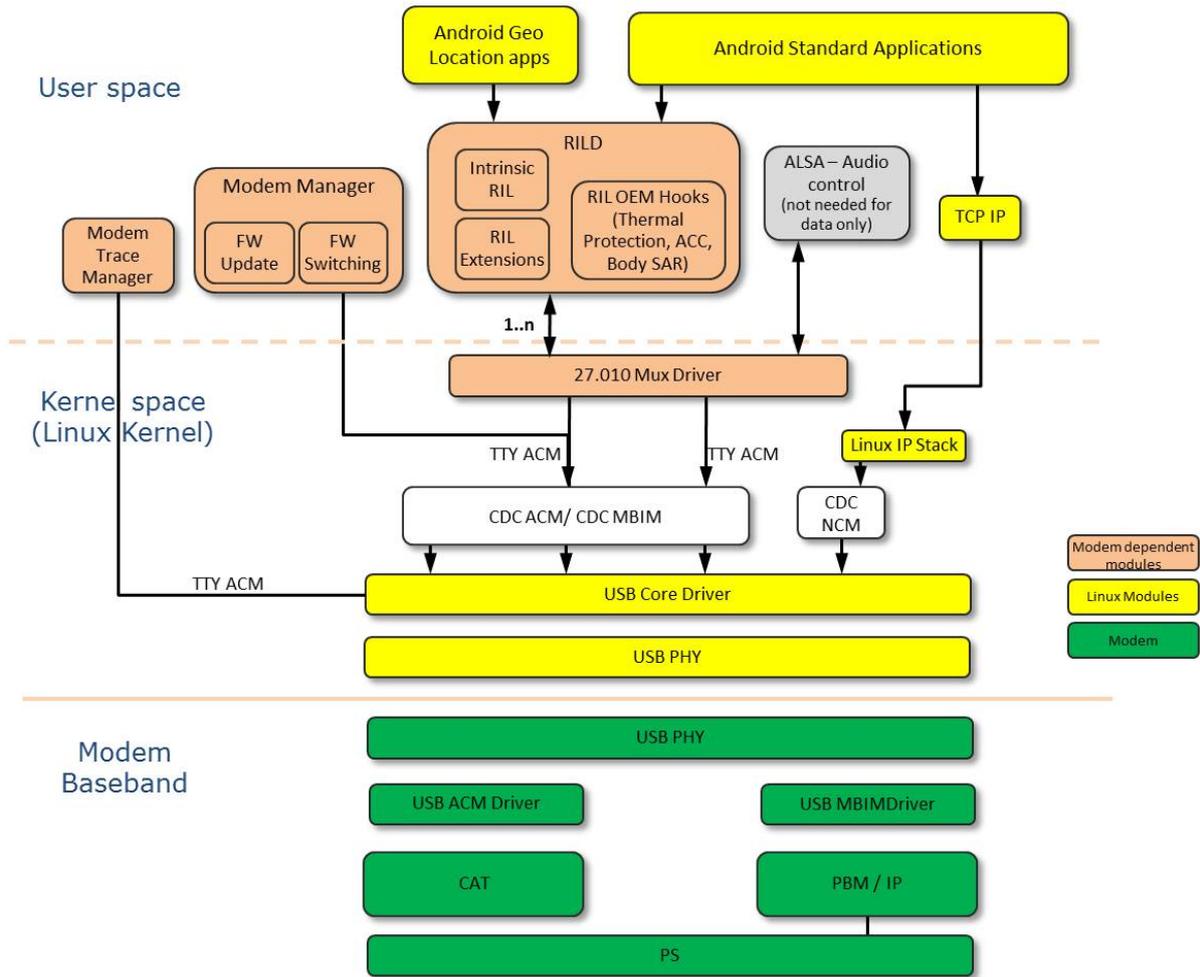


Figure 16 Chrome Software Architecture



8.2 Electrical Parameters - Host Interface Signals

Table 27 DC Specification for 3.3V Logic Signaling

Symbol	Parameter	Condition	Min	Max	Unit
+3.3V	Supply Voltage	-	3.135	3.465	V
V _{IH}	Input High Voltage	-	2.0	3.6	V
V _{IL}	Input Low Voltage	-	-0.5	0.8	V
I _{OL}	Output Low Current for Open-drain Signals Not applicable to LED# and DAS/DSS# pins	0.4 V	4	-	mA
I _{OL}	Output Low Current for Open-drain Signals Applies to the LED# pins	0.4 V	9	-	mA
I _{IN}	Input Leakage Current	0 V to 3.3 V	-10	+10	μA
I _{LKG}	Output Leakage Current	0 V to 3.3 V	-50	+50	μA
C _{IN}	Input Pin Capacitance	-	-	7	pF
C _{OUT}	Output Pin Capacitance	-	-	30	pF
R _{PULL-UP}	Pull-up Resistance	-	9	60	kΩ

Table 28 DC Specification for 1.8V Logic Signaling

Symbol	Parameter	Condition	Min	Max	Unit
V _{DD18}	Supply Voltage	-	1.7	1.9	V
V _{IH}	Input High Voltage	-	0.7 * V _{DD18}	V _{DD18} + 0.3	V
V _{IL}	Input Low Voltage	-	-0.3	0.3 V _{DD18}	V
V _{OH}	Output High Voltage	I _{OH} = -1 mA V _{DD18} Min	V _{DD18} - 0.45	-	V
V _{OL}	Output Low Voltage	I _{OL} = 1 mA V _{DD18} Min	-	0.45	V
I _{IN}	Input Leakage Current	0 V to V _{DD18}	-10	+10	μA
I _{LKG}	Output Leakage Current	0 V to V _{DD18}	-50	+50	μA
C _{IN}	Input Pin Capacitance	-	-	10	pF



8.3 Power Consumption

This section lists the power consumption targets.

Typical target values at $V_{sys} = 3.3\text{ V}$

Table 29 LTE Power Consumption

M.2 Power Consumption (*)		Transmit Power	
LTE Use Case	Band	10 dBm	23 dBm
LTE UTP, Cat. 3, 20 MHz, 100 RB - (APAC SKU only)	1	1195 mW	2195 mW
LTE UTP, Cat. 3, 20 MHz, 100 RB - (APAC SKU only)	3	1175 mW	2356 mW
LTE UTP, Cat. 3, 10 MHz, 50 RB - (APAC SKU only)	8	1000 mW	2201 mW
LTE UTP, Cat. 3, 20 MHz, 100 RB - (APAC SKU only)	9	1175 mW	2244 mW
LTE UTP, Cat. 3, 10 MHz, 50 RB - (APAC SKU only)	11	1073 mW	2155 mW
LTE UTP, Cat. 3, 15 MHz, 75 RB - (APAC SKU only)	18	1122 mW	1911 mW
LTE UTP, Cat. 3, 15 MHz, 75 RB - (APAC SKU only)	19	1112 mW	1874 mW
LTE UTP, Cat. 3, 15 MHz, 75 RB - (APAC SKU only)	21	1208 mW	2270 mW
LTE UTP, Cat. 3, 100 Mbps/50 Mbps, 20 MHz – (APAC not included)	7	1068 mW	2531 mW
LTE UTP, Cat. 3, max throughput, 10 MHz – (APAC not included)	17	916 mW	2394 mW
LTE Use Case	Standby Power		
LTE Stand-by current, DRX 1.28 s serv. Cell only	8 mW		

(*) *Applicable to modules:*

- LN930
- LN930-AP

Table 30 UMTS Power Consumption

M.2 Power Consumption		Transmit Power
UMTS Use Case (DC-HSDPA+ or HSDPA+)	Band	10 dBm
UMTS FTP, Cat. 24, RxDiv (M.2 DC-HSDPA+)	Band 1	988 mW



9 Other Information

9.1 EMI/EMC and Platform Noise

The M.2 Data Card has shielding and noise filtering in place to ensure that the WWAN module does not impact the operation of the host system.

The M.2 Data Card must also be able to tolerate platform noise caused by high order clock harmonics from the host processor and associated support circuitry. It is required that the noise levels (as measured at the antenna connector) in the operating frequencies of the M.2 Data Card be no greater than 5 dB as compared to the noise floor of the host system.

9.2 Platform Noise Mitigation - Adaptive Clocking

Wireless subsystems in mobile platforms are affected by platform related noise, even with the best antenna and chassis design. This noise hampers the wireless radio performance, sometimes severely. For platforms that incorporate wireless subsystems like WWAN, passing the wireless operator certification is an important component of platform launch.

One of the key elements of platform noise, commonly referred to as RF interference, is LCD display panel pixel clock and its harmonics. The pixel clock generates RF that translates directly into noise picked up by platform wireless radios due to the close proximity of display electronics and the integrated antennas in the system. Many of the panel vendors allow the pixel clock to be “tweaked” (i.e. adapt the pixel clock) to shift the harmonics from interfering with the wireless components in operating radio frequencies.

A radio’s receive performance could be improved by moving any harmonics of the graphics pixel clock outside of the frequencies used by the wireless modules. This will be accomplished by shifting the display pixel clock. Shifting the pixel clock is not expected to affect the graphics quality or its performance. The display panel refresh rate will not be changed.

To support crosstalk mitigation, the WWAN module provides an event indication to the host when the channel frequency changes. On the event indication, the host would use the frequency change information (i.e. Center Frequency, Bandwidth, and any other optional information) through an API that would facilitate the facilitating the implementation of a noise mitigation service.

9.3 Thermal Monitoring



The M.2 Data Card includes a digital thermal sensor in order to monitor the temperature of the WWAN Card. The firmware will support the extraction of temperature information from the module and the configuration of auxiliary trip points.

The configuration of the thermal trip points and receipt of thermal data is available through a WWAN power control API in order for the host to implement a power and thermal management framework for the system.

9.4 Seamless Roaming / Wifi Offload

The WWAN M.2 module provides support for EAP methods; EAP-SIM, EAP-AKA, and EAP-AKA'. These methods, which are used on WiFi authentication, require access to WWAN SIM credentials to connect to WiFi Networks and offload from WWAN.

All necessary AT commands needed for the EAP-SIM functionality are supported. In addition, all necessary commands need for the PIN entry, change, and lock/unlock are supported.

Through the API, the host can manage Wi-Fi Hotspot connectivity with Operator provisioned Hotspot SSIDs and/or End-User provided SSIDs and seamlessly offload a data session from a 3G/4G connection to Wi-Fi hotspot connection after successful authentication of the device and authorization of the end-user subscription using the SIM on the platform.

9.5 Conducted Transmit Power

Transmit power as measure at the WWAN antenna connector

Table 32 Conducted Transmit Power – 2G

Parameter	Condition	Requirement
Conducted Transmit Power	850 MHz/900 MHz	33 dBm +/- 3 db
	1800 MHz/1900 MHz	30 dBm +/- 3 db

2G not supported for APAC SKU

Table 33 Conducted Transmit Power – 3G

HSPA+ / LTE LN930		
Parameter	Condition	Requirement
Conducted Transmit Power ¹	W-CDMA class 3	24 dBm + 1 db /- 3 db
LN930-AP (APAC SKU only)		
Parameter	Condition	Requirement
Conducted Transmit Power ¹	W-CDMA class 3	24 dBm + 1 db /- 3 db

¹ Conducted transmit power as measured at the WWAN M.2 RF main antenna connector.



Table 34 Conducted Transmit Power – LTE

HSPA+ / LTE LN930		
Parameter	Condition	Requirement
Conducted Transmit Power ¹	E-UTRA class 3	23 dBm + 0.5/- 1 db
LN930-AP (APAC SKU only)		
Parameter	Condition	Requirement
Conducted Transmit Power ¹	E_UTRA class 3	22.5 dBm + 0.5 /- 1 db

² Conducted transmit power as measured at the WWAN M.2 RF main antenna connector.

9.6 Receiver Sensitivity

The reference sensitivity power level is the minimum mean power applied to both the WWAN M.2 antenna ports at which the throughput shall meet or exceed the requirements for the specified reference measurement channel.

Condition: Calibration voltage = 3.3V, 25C shielded room

Table 35 Rx Sensitivity - GSM

Band	Condition	Min Rx Sensitivity Limit (dBm)
GSM850	GMSK	-110
GSM900	GMSK	-109
GSM1800	GMSK	-109
GSM1900	GMSK	-106



Table 36 Rx Sensitivity - UMTS

HDP A+ / LTE LN930		
Band	Condition	Min Rx Sensitivity Limit (dBm)
1	BER<0.1%	-107
2	BER<0.1%	-106
4	BER<0.1%	-107
5	BER<0.1%	-107
8	BER<0.1%	-107
LN930-AP (APAC SKU only)		
Band	Condition	Min Rx Sensitivity Limit (dBm)
1	BER<0.1%	-106
6	BER<0.1%	-106
8	BER<0.1%	-103
11	BER<0.1%	-106
19	BER<0.1%	-106

GSM not supported for LN930-AP

Main and Diversity ports are measured separately. Combining both antenna ports increases sensitivity by 3 dB. Table 36 Rx Sensitivity – UMTS reflects both ports combined.

Table 37 Rx Sensitivity - LTE

HDP A+ / LTE LN930							
					EARFCN		
LTE Band	Duplex	Modulation	Bandwidth (Hz)	Min Rx Sensitivity Limit (dBm)	Low Channel	Middle Channel	High Channel
1	FDD	QPSK	10	-96	50	320	550
2	FDD	QPSK	10	-95	650	920	1150
3	FDD	QPSK	10	-97	1250	1678	1900
4	FDD	QPSK	10	-96	2000	2110	2350
5	FDD	QPSK	10	-97	2450	2510	2600
7	FDD	QPSK	10	-96	2800	3100	3400
8	FDD	QPSK	10	-97	3525	3625	3750
13	FDD	QPSK	10	-97	5180	5230	5279
17	FDD	QPSK	10	-97	5780	5800	5890
18	FDD	QPSK	10	-97	5900	5925	5950
19	FDD	QPSK	10	-97	6050	6075	6100
20	FDD	QPSK	10	-94	6200	6300	6400



LN930-AP (APAC SKU only)					EARFCN		
LTE Band	Duplex	Modulation	Bandwidth (Hz)	Min Rx Sensitivity Limit (dBm)	Low Channel	Middle Channel	High Channel
1	FDD	QPSK	10	-96	50	320	550
3	FDD	QPSK	10	-96	1250	1678	1900
8	FDD	QPSK	10	-96	3525	3625	3750
9	FDD	QPSK	10	-96	3850	3975	4099
11	FDD	QPSK	10	-96	4800	4850	4899
18	FDD	QPSK	10	-97	5900	5925	5950
19	FDD	QPSK	10	-97	6050	6075	6100
21	FDD	QPSK	10	-96	6500	6525	6549
26	FDD	QPSK	10	-97	8740	8865	8989

- GSM not supported for APAC SKU
- Main and Diversity ports are measured separately. Combining both antenna ports increases sensitivity by 3 dB. Table 36. Rx Sensitivity – UMTS reflects both ports combined.
- Table 37 is a generic view that includes all LTE bands for Rx sensitivity. The APAC SKU does not include LTE Bands 2, 4, 5, 7, 13, and 17.



RF Band	Center Frequency	Uplink (UL) UE Tx	Downlink (DL) UE Rx	Duplex Mode	Common Name	Bandwidth of Main Antenna (MHz)	Bandwidth of Diversity Antenna (MHz)
					band 12)		
018 XVIII (18)	850 MHz	815 MHz to 830 MHz	860 MHz to 875 MHz	FDD	Japan lower 800	60	15
019 XIX (19)	850 MHz	830 MHz to 845 MHz	875 MHz to 890 MHz	FDD	Japan upper 800	60	15
020 XX (20)	800 MHz	832 MHz to 862 MHz	791 MHz to 821 MHz	FDD	EU's Digital Dividend	71	30
021 XXI (21)	1500 MHz	1447.9 MHz to 1462.9 MHz	1495.9 MHz to 1510.9 MHz	FDD	PDC	63	15.4
025 XXV (25)	1900 MHz	1850 MHz to 1915 MHz	1930 MHz to 1995 MHz	FDD	Extended PCS (superset of band 2)	145	65
026 XXVI (26)	850MHz	814 MHz to 849 MHz	859 MHz to 894 MHz	FDD	ESM+CLR	80	35
027 XXVII (27)	850MHz	806 MHz to 824 MHz	851 MHz to 869 MHz	FDD	ESMR	63	18
028 XXVIII (28)	750MHz	703 MHz to 728 MHz	758 MHz to 803 MHz	FDD	APAC 700	100	45
GPS	1575.42 MHz				GPS L1		35
GLONASS	1602 MHz				GLONASS L1		35

- APAC SKU does not include RF Bands 7, 10, 13, 17, 20, 25, 26, 27, 28

9.8 GNSS Sensitivity

Table 40 GNSS Sensitivity

Parameter	Min Limit (dBm)
Cold Start Sensitivity	-145
Hot Start Sensitivity	-155



11.2 Land Pattern

Figure 19 illustrates a typical land pattern for a top-mount connector with the key removed.

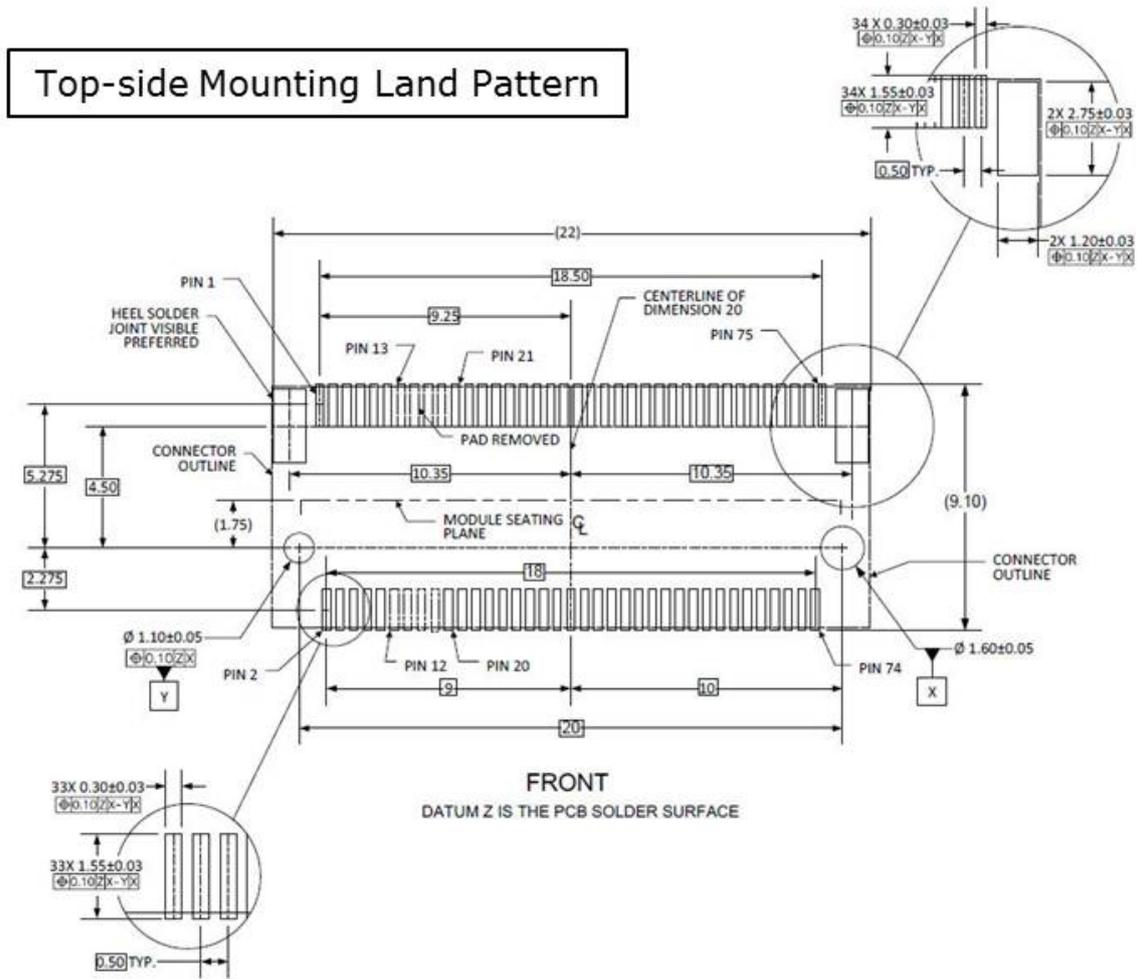


Figure 19 WWAN Card Type 3042 Top-Side Mounting Land Pattern



Figure 20 illustrates a typical mid-plane (in-line) land pattern with slot key removed.

Mid-plane Mounting Land Pattern

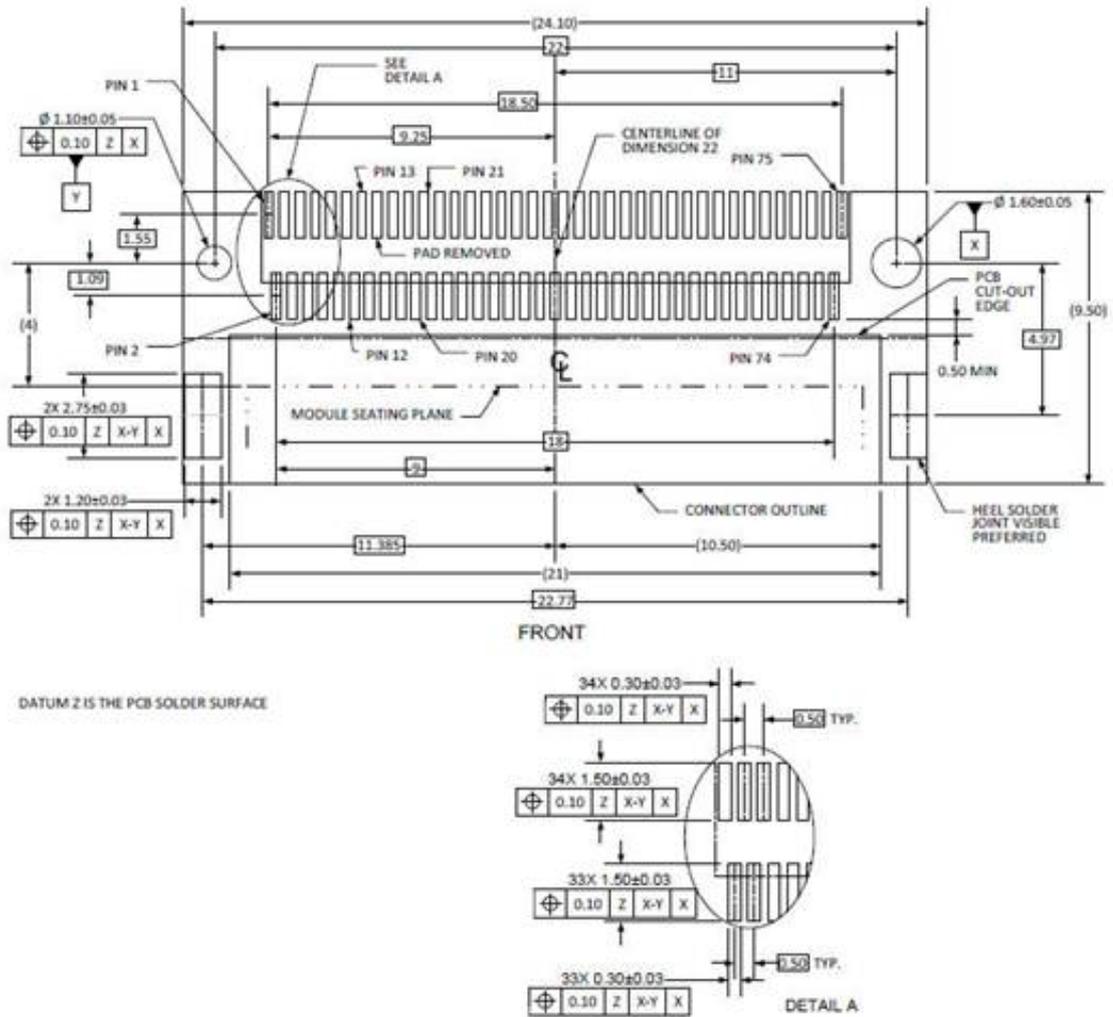


Figure 20 WWAN Card 3042 Mid-plane Land Pattern with Slot Key Removed



Norwegian	Telit Communications S.p.A. erklærer herved at utstyret 2G/3G module er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
Polish	Niniejszym Telit Communications S.p.A. oświadcza, że 2G/3G module jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC
Portuguese	Telit Communications S.p.A. declara que este 2G/3G module está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovak	Telit Communications S.p.A. týmto vyhlasuje, že 2G/3G module spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Slovenian	Telit Communications S.p.A. izjavlja, da je ta 2G/3G modul v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Spanish	Por medio de la presente Telit Communications S.p.A. declara que el 2G/3G module cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Swedish	Härmed intygar Telit Communications S.p.A. att denna 2G/3G module står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

In order to satisfy the essential requirements of 1999/5/EC Directive, the LN930 is compliant with the following standards:

RF spectrum use (R&TTE art. 3.2)	EN 300 440-2 V1.4.1 EN 301 511 V9.0.2 EN 301 908-1 V6.2.1 EN 301 908-2 V5.2.1 EN 301 908-13 V5.2.1 EN 300 440-1 V1.6.1
EMC (R&TTE art. 3.1b)	EN 301 489-1 V1.9.2 EN 301 489-3 V1.4.1 EN 301 489-7 V1.3.1 EN 301 489-24 V1.5.1
Health & Safety (R&TTE art. 3.1a)	EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 EN 62311: 2008



The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body:

Thus, the following marking is included in the product:

CE 0682

The full declaration of conformity can be found on the following address:
<http://www.telit.com/>

There is no restriction for the commercialization in all the countries of the European Union.

Final product integrating this module must be assessed against essential requirements of the 1999/5/EC (R&TTE) Directive. It should be noted that assessment does not necessarily lead to testing. Telit Communications S.p.A. recommends carrying out the following assessments:

RF spectrum use (R&TTE art. 3.2)	It will depend on the antenna used on the final product.
EMC (R&TTE art. 3.1b)	Testing
Health & Safety (R&TTE art. 3.1a)	Testing

Alternately, assessment of the final product against EMC (Art. 3.1b) and Electrical safety (Art. 3.1a) essential requirements can be done against the essential requirements of the EMC and the LVD Directives:

- Low Voltage Directive 2006/95/EC and product safety
- Directive EMC 2004/108/EC for conformity for EMC

13.2 CE RF Exposure Compliance

This device meets the EU requirements (1999/519/EC) and the International Commission on Non-Ionizing Radiation Protection (ICNIRP) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

To comply with the RF exposure requirements, this module must be installed in a host platform that is intended to be operated in a minimum of 20 cm separation distance to the user.



14 FCC/IC Regulatory notices

14.1 Modification statement

Telit has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

Telit n'approuve aucune modification apportée à l'appareil par l'utilisateur, quelle qu'en soit la nature. Tout changement ou modification peuvent annuler le droit d'utilisation de l'appareil par l'utilisateur.

14.2 Manual Information to the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as show in this manual.

CAN ICES-3(B)/ NMB-3(B)

14.3 Interference statement

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

14.4 FCC Class B digital device notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed



15 Document History

Revision	Date	Changes
0	2013-05-20	First issue
1	2013-07-09	<ul style="list-style-type: none"> Update setting for Pin 21 on the host interface. This signal is not connected. Updated pin names of pins 1, 21, 69, and 75 in Table 4 and Table 19 to simply reflect HW Configuration use. Updated Table 24 to indicate configuration pins 1, 69, and 75 are tied to GND. Rename section 3.6 Coexistence Interface to In-Device Coexistence Interface. Additional information on the Inter-device coexistence support was added. Updated section 4.1.3 System Trace Tool Section. Updated Figure 5 – RF Engine for WW SKU. Add further information USB LPM to USB section Added information on Seamless Roaming & Wifi Off-load – SIM_EAP, SIM-AKA under Other Requirements Added information on Antenna Design Guidelines under Other Requirements.
2	2013-07-29	RF bands updated
3	2013-08-26	Updating on RF bands Updated section 3.5 and 3.4.5 Updated temp range
4	2013-09-09	HN930-DC product was removed from portfolio
5	2013-09-15	Main & Diversity antenna positions have been swapped. <ul style="list-style-type: none"> Updated documentation accordingly, Figure 6 and Figure 10. Updated WWAN M.2 Mechanical drawings, Figure 14 through Figure 17. Updated Card_power_ON_OFF description for UltraBook in Table 9. Updated comments in Table 15 regarding the DPR#/SAR signal. Updated SIM DTECTED signal to indicate an external pull-up. Updated Platform Block Diagrams to show DPR# signal is connected to an EINT pin (not GPIO) on XGOLD. Identified Audio Signals on host interface in Table 4. Previously these were simply defined as Reserved. Updated VBAT requirements in Table 24 and Table 25.
6	2013-11-20	<ul style="list-style-type: none"> Regulation section was updated Adding support for UMTS Band 6 to M.2 APAC SKU (see Table 2). Updated 3G RF Band support for APAC Module, supported bands are 1, 8, 11, and 19. (see Table 2) Added Measured Values for 2G/3G Rx Sensitivity Table 31 and Table 32. Update Measured Value and changed header name in Rx Sensitivity LTE Table 33 Modified supply voltage lower spec for Ultra book in Table 24. Update Table 4, Table 6, Table 26 voltage levels for USB and SIM pins. Added LTE conditions and added Table 33.
7	2014-04-10	<ul style="list-style-type: none"> Added SSIC to ICP interface. Updated RESET signal definition. Updated Antenna figures. Updated Conducted Transmit Power requirements, Table 32. Section 2.2, Table 4 <ul style="list-style-type: none"> Changed UIM signals pins 30, 32, 34, 36 Replaced dash with underscore in signal names. Changed supply voltage for Antenna Tuning Signal (ANTCTL*) from (1.7 V – 2.6 V) to 1.8 V. Section 3.5, Table 20 changed supply voltage for Antenna Tuning Signals (ANTCTL*) from (1.7 V – 2.6 V) to 1.8 V. Section 3.11, Table 25 correction to both no connect pins and key slot pins. Section 8.2, Table 27 <ul style="list-style-type: none"> Changed the max voltage to 3.0 V for WAKE_WWAN# signal Changed Typ voltage and max voltage for the Antenna Tuning Signals to 0/1.8 V and 2.3 V respectfully



